


MODEL TS3832

SPOTNAILS[®]

DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

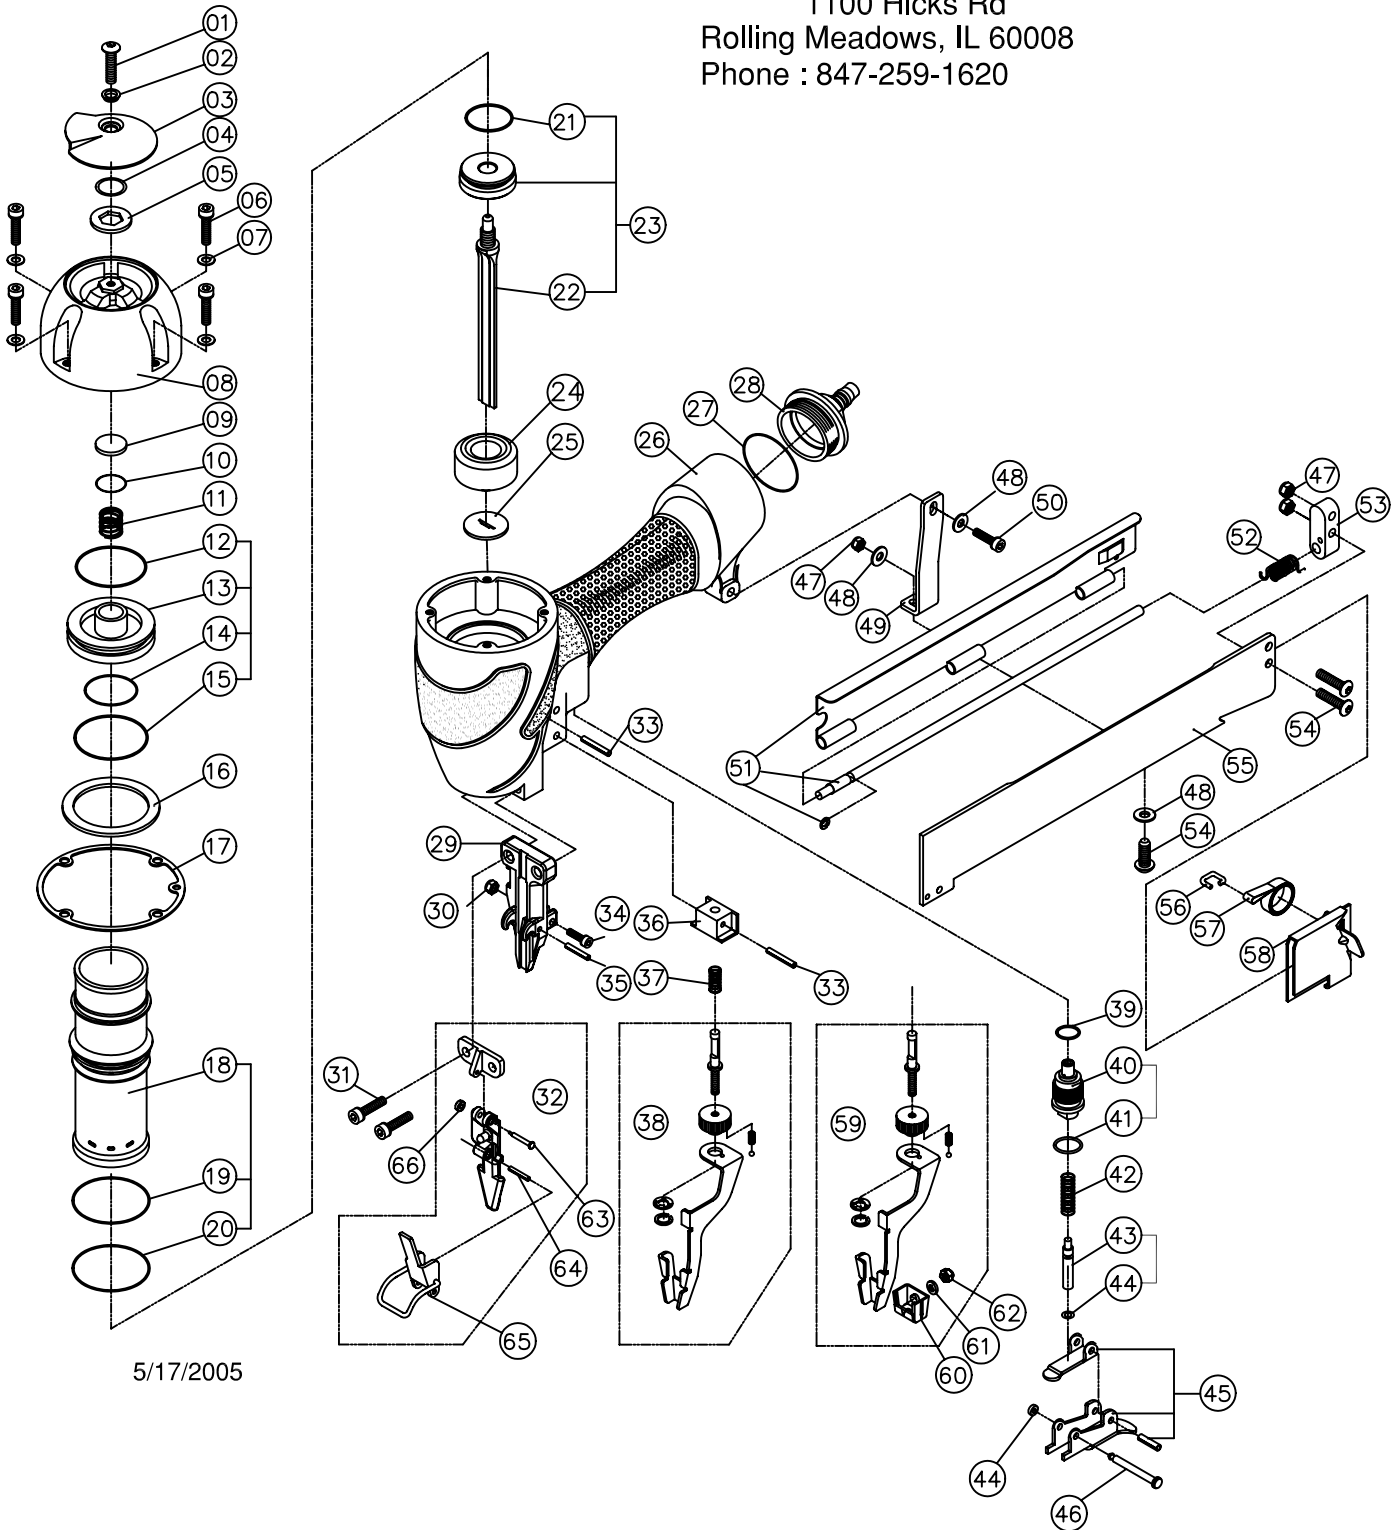

5/17/2005

SPOTNAILS MODEL TS3832

Ref No.	Part No.	Description		Ref No.	Part No.	Description	
01	P-24370	Screw		34	P-24452	Screw	
02	P-96118	Bushing		35	P-07290	Pin	
03	P-70046	Exhaust Deflector		36	P-53165	Safety Guide	
04	P-64377	O-Ring		37	P-18328	Spring	
05	P-32217	Washer		38	AS-53057	Safety Assembly	
06	P-24358	Cap Screw	◆	39	P-64239	O-Ring	
07	P-32211	Flat Washer		40	P-22114	Bleeder Valve	
08	P-60180	Cap	◆	41	P-64241	O-Ring	
◆	09	P-15193	Exhaust Seal	42	P-18227	Spring	
◆	10	P-64384	O-Ring	43	P-22179	Plunger	
	11	P-18331	Poppet Spring	◆	44	P-64240	O-Ring
◆	12	P-64232	Poppet O-Ring	45	AS-21014	Trigger Assembly	
	13	P-63042	Poppet	46	P-07327	Trigger Pin	
◆	14	P-64422	Piston Stop O-Ring	47	P-26142	Nut	
◆	15	P-64234	Cylinder Seal O-Ring	48	P-32170	Washer	
	16	P-03081	Guide Spacer	49	P-13046	Bracket	
◆	17	P-62079	Gasket	50	P-24307	Screw	
	18	P-05106	Cylinder	51	AS-99086	Magazine Cover Assembly	
◆	19	P-64235	Cylinder O-Ring	52	P-18332	Spring	
◆	20	P-64423	O-Ring	53	P-05098	Fixed Spacer	
◆	21	P-64424	Piston O-Ring	54	P-24310	Screw	
	22	P-06236	Driver Blade	55	P-12352	Track	
	23	AS-06054	Piston & Driver Assembly	56	P-18233	Spring Clip	
	24	P-15121	Bumper	57	P-18232	Negator Spring	
◆	25	P-15124	Return Seal	58	P-09158	Pusher	
	26	P-01271	Body	59	AS-53061	No Mar Tip Assembly	
	27	P-64425	O-Ring	60	P-96129	No Mar Tip	
	28	P-60175	End Cap	61	P-32227	Washer	
	29	P-08481	Wear Plate	62	P-26165	Nut	
	30	P-26125	Nut	63	P-07356	Step Pin	
	31	P-24300	Screw	64	P-07353	Pin	
	32	AS-10051	Front Plate Assembly	65	AS-04036	Latch Assembly	
	33	P-07262	Pin	66	P-64434	O-Ring	

◆ Parts Included In AS-97309 O-Ring And Seal Kit